

DBC-4 Unit

DBC-4 Distributor is a 4 output user distributor for DT system, to approach the star topology connection in the apartment system. See Section 3 Cables and Connection for detail connection information.

set to 120 for the last DBC-4
on the building, the others
must be set to HI.

